



OPERATING MANUAL

K1

Charging the battery Fitting the drive wheels / front wheel Assembly / fitting the battery Attaching a golf bag **Control unit Comissioning & handling Battery & charger** 14 Care & cleaning **Guarantee conditions** Acceptance of guarantee claims Declaration of conformity **KIFFE trolley inspection**

[Warranty extension]

CONGRATULATIONS ON CHOOSING A KIFFE K1

We believe that every golfer deserves better than mediocre equipment. And that's why we produce technically superior, handmade trolleys with outstanding workmanship here at KIFFE Golf Manufaktur, focusing on a sophisticated feature set and simple handling so you can concentrate on your game.

Please follow the instructions in this operating manual to enjoy your product as long as possible. If you have any questions that are not answered in the manual, our team will be happy to help. You can reach them at: **info@kiffe-golf.de**.

Wishing you many special moments on the golf course with your trolley and some great rounds!

Yours, KIFFE Golf Manufaktur

When you receive your trolley, please check

- the packaging for any damage caused in transit
- that all items that should be included are present

the trolley for visible defects/damage

Please report any visible defects, damage caused in transit or incomplete deliveries to your specialist dealer directly or in writing immediately (no later than two working days after delivery):

E-MAIL info@kiffe-golf.de

Please note that we cannot accept complaints of this kind after this period.



Unique, clear control unit

without double assignment of the function keys.



CHARGING THE BATTERY



Charger connected to the mains power supply



Connecting the charger to the battery



The battery and charger are not connected properly until a noticeable resistance at the battery connection has been overcome. Charging can start.




Charge the battery for 24 hours non-stop before using the trolley for the first time.

FITTING THE DRIVE WHEELS



Drive pin: The engine meshes with the wheel's adapter plate.

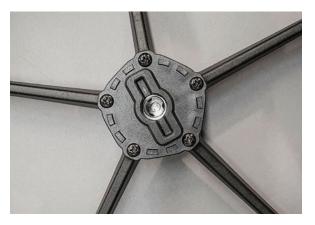

Rear of drive wheel



Attach the wheels. Press and hold the metal buttonwhen attaching the wheel. Slide in to the stop (rear axle groove).



When you release the button, the lock grips the axle. The front groove on the axle is used as a locking mechanism for freewheeling without using the motor.

FITTING THE FRONT WHEEL



Attach the wheel. Press and hold the metal button with the palm of your hand when attaching the wheel. Slide in to the stop (axle groove).



When you release the button, the lock grips the axle.

ASSEMBLY



Securing the upper handlebar section



All trolley components

FITTING THE BATTERY



Attach the battery to the two pins on the handlebar with the cable facing downwards



Do not let the plug touch the ground to avoid soiling.





Connect the battery using the magnetic connector. The connector faces forwards horizontally. The flashing signal on the upper control unit indicates that the battery has been connected properly.

ATTACHING A GOLF BAG



Place the golf bag on the trolley.



Secure the bag to the upper bag holder by attaching the rubber cords to the mounting point.

WARNING:

The bag rest is fixed, i.e. it cannot be adapted to fit various bag sizes.



Secure the bag to the lower bag holder by attaching the rubber cords to the mounting point.

COMMISSIONING AND HANDLING



The trolley is ready to start when the LEDs under the 'K' are illuminated continuously. The battery charge status indicator has 3 LEDs.



Switch on the trolley by pressing the Start/ Stop button 'K' briefly. The battery charge status indicator lights up. 3 x green = full charge. As the trolley is used, this reduces to 2 x green, 1 x green, orange, red = almost empty.



Turn the rotary knob to start moving your trolley. This speeds up or slows down the trolley. The speed controller (continuous wheel) can be controlled either from the left or right.

Turn clockwise to make the trolley travel faster.

Turn counter-clockwise to slow down the trolley.




The trolley has a speed memory feature, which saves the last speed of travel (when you press the Start/Stop button). To travel at the preset speed, all you have to do is press the Start/Stop button.

CONTROL UNIT IN DETAIL





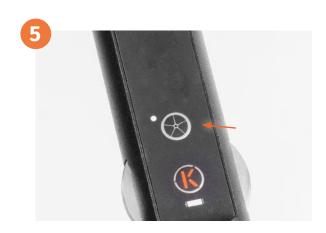


The trolley has both manual and electronic freewheel modes.

The electronic freewheel is set by pressing a button on the control unit. To activate it, press the Freewheel button. The LED next to the button lights up in white. The drive is deactivated and the electronic braking effect is released.

This travel mode is necessary and particularly useful when moving the trolley short distances in the opposite direction or manoeuvring it in tight spaces, e.g. to turn around on the green or at the tee.

NOTE

To use the trolley without a battery or to move it longer distances without using the drive, you must activate the manual freewheel to prevent damage to the trolley and make it easier to push and pull.

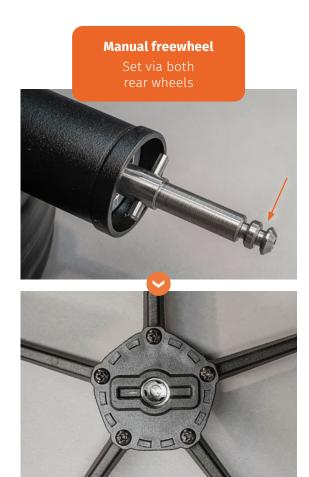

DECOUPLING

Hold down the wheel lock, pull the wheel out of the drive plate by approx. 5 mm and engage in the freewheel groove by releasing the push button.

BATTERY AND CHARGER

CHARGING

- Before using the trolley for the first time, please charge your battery for 24 hours non-stop using the enclosed original charger.
- To do so, first connect the charger to the mains power supply and then connect the battery and the charger.
- The LED on the charger lights up in green continuously when the charging process is complete.
- For best results, please charge the battery fully after every use. This does NOT cause a memory effect.
- Remember to disconnect the battery and charger when the charger is not connected to the mains power supply. If the battery and charger are connected for extended periods without a power supply, the resulting deep discharge can render the battery unusable.
- Only charge the battery in well ventilated rooms at a suitable temperature (between 5°C and 35°C). The charger must not be covered during the charging process.
- ✓ Before putting your trolley into storage at the end of the season, charge your battery fully using the enclosed original charger for 24 hours (disconnect the battery and charger). Charge the battery for a few hours every three months.

SAFETY INSTRUCTIONS AND WARNINGS

- Check that the charger is in proper working order. A defective charger can damage the battery! The charger LED lights up in green continuously when the battery is not connected. When the battery is connected, the colour changes to red, which means that charging has started.
- Do not throw, drop, damage or tamper with the battery (e.g. by drilling into it, soldering or gluing it etc.)
- The battery is housed in a hard cover that must not be opened under any circumstances.
- Do not immerse the battery in liquids or pour any liquids over it.

- Only use the battery to operate a KIFFE trolley.
- Damaged batteries (whether the hard cover or cable is damaged) must not be used or transported. Please inform KIFFE Golf Manufaktur GmbH without delay.
- Keep the battery away from naked flames and do not expose it to extreme temperatures for extended periods (e.g. in a parked car in summer or in unheated caddie halls in winter).

CARE AND CLEANING

Please note that failure to follow the safety instructions and heed the warnings can cause damage to the battery. Doing so voids the warranty. Under certain circumstances, this can even increase the risk of fire.

Regular care and maintenance can help extend the life of your trolley. Ideally, you should clean your trolley with compressed air after each round. Alternatively, you can clean it with a damp cloth. Remove the battery before cleaning. Take care to avoid water coming into contact with the control unit, battery connection and electronic components.

Please refrain from using abrasive and harsh cleaning agents, oils and greases when cleaning the trolley. All parts of the trolley are designed in such a way that greasing is unnecessary – in fact it would be counterproductive.

MANUFACTURER'S GUARANTEE CONDITIONS

If you have a guarantee claim, please contact the specialist dealer where you bought the trolley. Please note that your dealer needs the trolley along with the battery, charger and other special accessories to send them to the manufacturer. Please also keep your purchase receipt for this eventuality.

KIFFE Golf Manufaktur GmbH grants a 3-year warranty on frames & wheels of all models of the K-Line from 2016. A 2-year warranty is granted on the electronics and the battery.

The manufacturer's guarantee and warranty do not cover wearing parts (e.g. wheels, tyres, operating components, handles and rubber cords) or damage to paintwork.

Batteries are affected by an irreversible ageing process. Deterioration in performance due to ageing is not a production defect. KIFFE's proprietary battery management system (BMS) maximises the battery life, with careful handling of the battery also helping to extend its life. Please observe the charging instructions as well as the safety instructions and warnings in this operating manual.

Replacement of the trolley or parts of the trolley as well as any repairs carried out under guarantee do not extend the guarantee period.

Fundamental requirements for ACCEPTANCE OF GUARANTEE CLAIMS

- Compliance with the instructions in this operating manual
- Regular, appropriate care
- Use of the trolley as intended (for transporting a golf bag on a golf course)
- Use of KIFFE original batteries and chargers only

THE GUARANTEE / WARRANTY EXPIRES

- in the event of use/handling of the trolley for purposes other than the intended purpose
- in the event of overloading i.e. by towing with a buggy or golf cart or using the trolley to tow other items
- in the event of water damage
- X in the event of damage caused in transit
- in the event of damage caused by a fall
- in the event of a lack of care
- in the event of system modifications (mechanical, electrical, changes to parameters and/or software)
- in the event of removal/destruction of affixed serial numbers
- in the event of interventions and/or repairs without express written approval from the manufacturer

- in the event of defects and damage that can be traced back to force majeure or accidents
- in the event of defects and damage that can be traced back to failure to use KIFFE original replacement parts to replace components
- if the battery and/or charger have marks that indicate that they have been opened, dismantled, drilled into, dropped, crushed, exposed to extreme temperatures, tampered with, short-circuited, immersed in water or other liquids (or had liquids poured over them), deeply discharged or damaged in any other way
- if there is mechanical damage to the connectors or cables
- in the event of improper transport or storage of the trolley and/or battery
- in the event of damage to the battery caused by external environmental influences (e.g. lightning strike-induced surges)

DECLARATION OF CONFORMITY

Manufacturer

KIFFE Golf Manufaktur GmbH Sophie-Opel-Strasse 14 64625 Bensheim

The manufacturer hereby declares that the version of the above trolley put into circulation by us complies with the fundamental health and safety requirements of EC Directive 2004/108/EC, both in its basic design and construction.

Type designation

ELECTRIC GOLF TROLLEY

Series

K1

Applicable specifications

DIN EN 6100 - 6 - 2: 2006.03 plus amendment 1:2001.06 DIN EN 55011:2011.04 RoHS Directive 2011/65/EU

The trolley is only suitable for transporting a golf bag on a golf course.

The manufacturer assumes no liability for retrospective changes made to the device that have not been expressly approved by the manufacturer.

KIFFE TROLLEY INSPECTION



Enjoy a 5-year warranty

from the date of purchase if you regularly (annually or no later than 18 months) subject your trolley to the original KIFFE trolley inspection.



* Trolley inspection fees are subject to change, please always ask for the current costs in advance.

✓ Send in for KIFFE trolley inspection:

Please download the service form at www.kiffe-golf.com/en/customer-service. Fill out the form and send it to service@kiffe-golf.de

SHIPPING

Please only return your KIFFE trolley to us in the original packaging for repairs or servicing. In the event of damage due to poor packaging, the warranty is void. In this case, any repair and maintenance costs will be borne by the sender.

Please do not forget to include this service booklet.

PLEASE FILL IN

Serial number
Model name
Purchase date
First name / Last name
Street / house number
Zip code / City
Telephone (for queries)
E-Mail (for queries)

TROLLEY INSPECTION	
Stamp & signature	Inspection performed
Trolley inspection Date	
Next trolley inspection	
TROLLEY INSPECTION	
Stamp & signature	Inspection performed
Trolley inspection Date	
Next trolley inspection	
Next trolley inspection TROLLEY INSPECTION	
	Inspection performed
TROLLEY INSPECTION	Inspection performed

TROLLEY INSPECTION	
Stamp & signature	Inspection performed
Trolley inspection Date	
Next trolley inspection	
TROLLEY INSPECTION	
Stamp & signature	Inspection performed
Stamp & signature Trolley inspection Date	Inspection performed
	Inspection performed
Trolley inspection Date	Inspection performed
Trolley inspection Date Next trolley inspection	Inspection performed
Trolley inspection Date Next trolley inspection	Inspection performed Inspection performed
Trolley inspection Next trolley inspection TROLLEY INSPECTION	



REGISTER YOUR

TROLLEY NOW



Register online at www.kiffe-golf.com/kiffe-card and receive a €25 discount on our KIFFE Windbuster golf umbrella.

25€ DISCOUNT

59€ only 34€

Your personal serial number

Enter the serial number when registering the product.



KIFFE Golf Manufaktur GmbH

Sophie-Opel-Strasse 14 • 64625 Bensheim T: +49 625 18262700

info@kiffe-golf.de • www.kiffe-golf.com/en